

Dimension W

300 * 85 * 41 (1U) mm 11.8 * 3.35 * 1.61(1U) inch





































Features

- Universal AC input / Full range (Withstand 300VAC surge input for 5 seconds)
- Built-in active PFC function
- High efficiency up to 93%
- · Forced air cooling by built-in DC fan
- · Output voltage and constant current level programmable
- Active current sharing up to 9600W (5+1)
- Built-in remote ON-OFF control / remote sense / auxiliary power / DC OK signal / OTP alarm signal
- · Protections: Short circuit / Overload / Over voltage / Over temperature
- Optional PMBus or CANBus protocol
- 5 years warranty

Applications

- Factory control or automation apparatus
- Test and measurement instrument
- · Laser related machine
- · Aging facility
- · Digital broadcasting
- · Constant current source
- · Redundant system

■ GTIN CODE

MW Search: https://www.meanwell.com/serviceGTIN.aspx

Description

RSP-1600 is a 1.6KW single output enclosed type AC/DC power supply with a 1U low profile and a high power density up to 25W/inch³. This series operates for 90~264VAC input voltage and offers the models with the DC output mostly demanded from the industry. Each model is cooled by the thermostatically controlled fan. Moreover, RSP-1600 provides vast design flexibility by equipping various built-in functions such as the output programming, active current sharing, remote ON-OFF control, auxiliary power, etc.

Model Encoding / Order Information



Type	Communication Protocol	Note
Blank	None	In Stock
PM	PMBus protocol	By request
CAN	CANBus protocol	By request



SPECIFICATION

MODEL		RSP-1600-12	RSP-1600-24	RSP-1600-27	RSP-1600-36	RSP-1600-48			
	DC VOLTAGE	12V	24V	27V	36V	48V			
	RATED CURRENT	125A	67A	59A	44.5A	33.5A			
	CURRENT RANGE	0 ~ 125A	0 ~ 67A	0 ~ 59A	0 ~ 44.5A	0 ~ 33.5A			
	RATED POWER	1500W	1608W	1593W	1602W	1608W			
	RIPPLE & NOISE (max.) Note.2	150mVp-p	200mVp-p	200mVp-p	250mVp-p	300mVp-p			
OUTPUT	VOLTAGE ADJ. RANGE	11.5 ~ 15V	23.5 ~ 30V	26.5 ~ 33.5V	35.5 ~ 45V	47.5 ~ 58.8V			
	VOLTAGE TOLERANCE Note.4	±1.0%	±1.0%	±1.0%	±1.0%	±1.0%			
	LINE REGULATION	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%			
	LOAD REGULATION	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%			
	SETUP, RISE TIME	1500ms, 60ms/230VAC a	it full load						
	HOLD UP TIME (Typ.)	16ms / 230VAC at 75% lo	ad 10ms / 230	VAC at full load					
			370VDC						
	FREQUENCY RANGE	47 ~ 63Hz							
	POWER FACTOR (Typ.)	0.97/230VAC at full load							
NPUT	EFFICIENCY (Typ.)	89%	91.5%	92%	92%	93%			
NFOI		14A/115VAC 8A/230VAC		8.5A/230VAC	0270	0070			
	INRUSH CURRENT (Typ.)	COLD START 35A/230V/							
	LEAKAGE CURRENT	<2mA / 230VAC							
	ELAKAGE GOKKERT	105 ~ 115% rated current	.						
	OVERLOAD			ut dayin O/D valtage ofter F	ann After O/D voltage fall				
		7,		ut down O/P voltage after 5					
PROTECTION	OVER VOLTAGE	15.75 ~ 18.75V	31.5 ~ 37.5V	35.2 ~ 41.9V	47.2 ~ 56.3V	63 ~ 75V			
		Protection type : Shut do			, ,				
	OVER TEMPERATURE	71	1 0 ,	vers automatically after tem		4010			
	OUTPUT VOLTAGE PROGRAMMABLE(PV) Note 6	Adjustment of output vo	Itage is allowable to	40 ~ 125% of nominal outp	out voltage (60 ~ 125% to	or 12V).			
	OUTPUT CURRENT	Adjustment of constant current level is allowable to 20 ~ 100% of rated current. Please refer to the Function Manual.							
UNCTION	AUXILIARY POWER	5V @ 0.3A, 12V @ 0.8A	tion manual.						
	REMOTE ON-OFF CONTROL	By electrical signal or dry contact Power ON:short Power OFF:open. Please refer to the Function Manual							
		Compensate voltage drop on the load wiring up to 0.5V. Please refer to the Function Manual							
	REMOTE SENSE ALARM SIGNAL	Isolated signal output for T-alarm and DC OK							
	WORKING TEMP.								
		-30 ~ +70 °C (Refer to "Derating Curve") 20 ~ 90% RH non-condensing							
	WORKING HUMIDITY STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% R							
ENVIRONMENT	TEMP. COEFFICIENT	·	n non-condensing						
	VIBRATION	` '	±0.03%/°C (0~50°C) 10~500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes						
		,			LONG 4 4000 4 A 0/N 7000	200 4 FACTRTO 004			
	SAFETY STANDARDS	UL62368-1, CAN/CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, BSMI CNS14336-1, AS/NZS62368.1, EAC TP TC 004 app							
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:1.5KVAC I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C / 70% RH							
	ISOLATION RESISTANCE				Toot Love	Test Level / Note			
		Parameter		Standard		ii / NULE			
	EMC EMISSION	Conducted Radiated		3S EN/EN55032 (CISPR32) 3S EN/EN55032 (CISPR32)					
	EMC EMISSION			, ,	<u>'</u>				
		Harmonic Current		3S EN/EN61000-3-2	Class A				
SAFETY &		Voltage Flicker		BS EN/EN61000-3-3					
EMC		BS EN/EN55035, BS EN			I =	LINI.			
Note 8)		Parameter		Standard	Test Leve				
		ESD		BS EN/EN61000-4-2		KV air ; Level 2, 4KV contact			
		Radiated		BS EN/EN61000-4-3	Level 3				
	EMC IMMUNITY	EFT / Burst		BS EN/EN61000-4-4	Level 3				
	ENIC INIVIUNITY	Surge		BS EN/EN61000-4-5		KV/Line-Line 4KV/Line-Earth			
		Conducted		BS EN/EN61000-4-6	Level 3				
		Magnetic Field		BS EN/EN61000-4-8	Level 4				
		Voltage Dips and Interrup	otions I	3S EN/EN61000-4-11		0.5 periods, 30% dip 25 perio rruptions 250 periods			
	MTBF	478.8K hrs min. Telco	rdia SR-332 (Bellcor	re); 42.1K hrs min. MIL-l	HDBK-217F (25°C)				
	DIMENSION	300*85*41mm (L*W*H)							
THERS	DINIENSION								
OTHERS	PACKING	2.1Kg;6pcs/13.6Kg/1.250	CUFT						

NOTE

- All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25 C of ambient temperature.
 Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1 uf & 47 uf parallel capacitor.
 Under parallel operation ripple of the output voltage may be higher than the SPEC at light load condition. It will go back to normal ripple level once the output load is more than 5%.


- 4. Tolerance : includes set up tolerance, line regulation and load regulation.
 5. Derating may be needed under low input voltages. Please check the derating curve for more details.
 6. PV/PC functions when users are not operating on PMBus/CANBus. SVR functions when users are neither operating on PMBus/CANBus nor using PV/PC.
- 7. Output will shut down after O/P voltage is below < 80% of Vset for 5 sec, re-power on to recover.
- 8. The power supply is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on a 720mm'360mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on https://www.meanwell.com//Upload/PDF/EMI_statement_en.pdf)
- 9. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft).
- ** Product Liability Disclaimer : For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx



-10

AMBIENT TEMPERATURE (°C)

-30

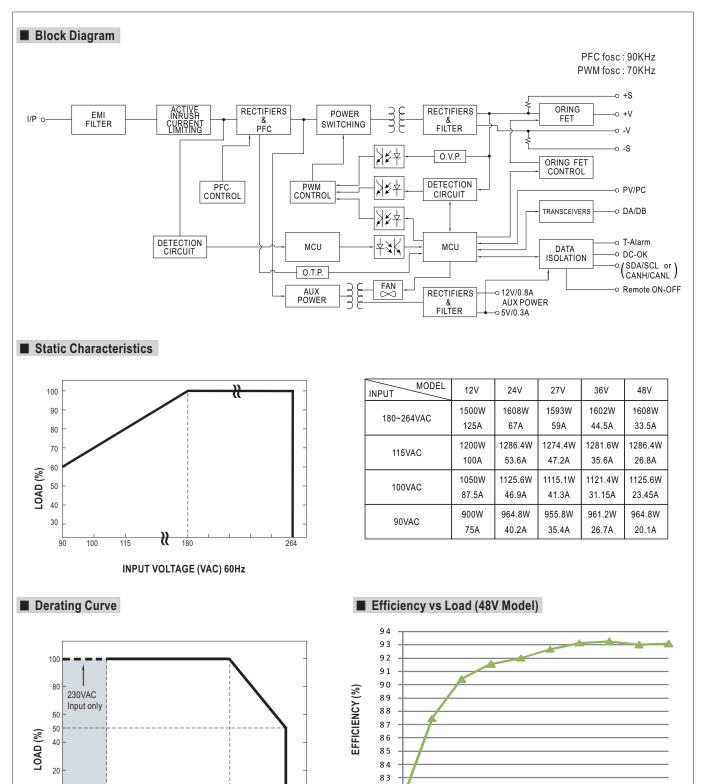

82

10%

20%

30%

40%

LOAD

(HORIZONTAL)


60

50% 60% 70% 80% 90% 100%



■ Function Manual


- 1. Voltage Drop Compensation
 - 1.1 Remote Sense
 - ※ The Remote Sense compensates voltage drop on the load wiring up to 0.5V

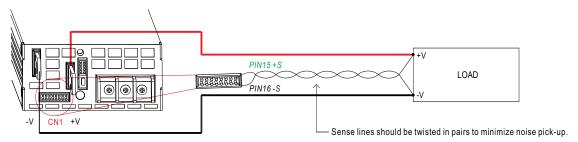

© The +S signal should be connected to the positive terminal of the load whereas -S signal to the negative terminal.


1.2 Local Sense


The +S,-S have to be connected to the +V(signal), -V(signal), respectively, as the following diagram, in order to get the correct output voltage if Remote Sense is not used.

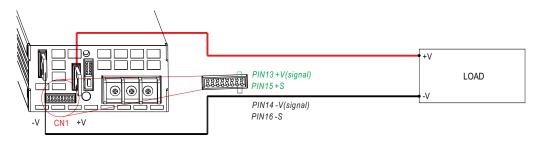


2. Output Voltage Programming (or, PV/remote voltage programming/remote adjust/margin programming/dynamic voltage trim)

💥 In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed by applying EXTERNAL VOLTAGE.

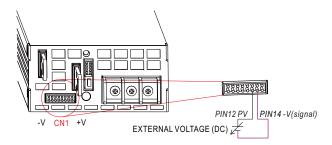

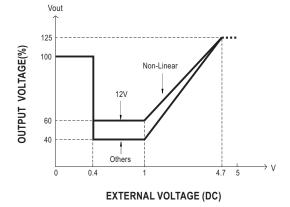

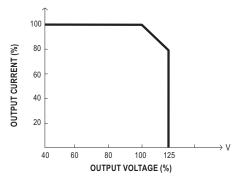


- $\hfill \bigcirc$ The rated current should change with the Output Voltage Programming accordingly.
- \bigcirc For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation" section.




3. Constant Current Level Programming (or, PC / remote current programming / dynamic current trim)

% The constant current level can be trimmed to 20~100% of the rated current by applying EXTERNAL VOLTAGE.

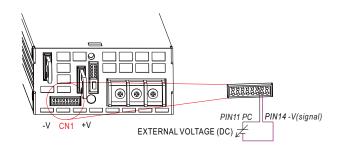


- \odot For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation" section.
- Output will shut down after O/P voltage is below < 80% of Vset for 5 sec, re-power on to recover.

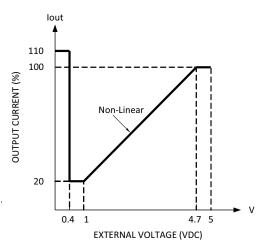

4. Remote ON-OFF Control


※ The power supply can be turned ON/OFF individually or along with other units by using the "Remote ON-OFF" function.

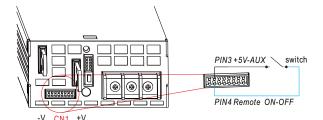

Between Remote ON-OFF and +5V-AUX	Power Supply Status
Switch Short	ON
Switch Open	OFF

5. Alarm Signal Output

※ There are 2 alarm signals, DC OK and T-ALARM, in TTL signal form, on CN1. These signals are isolated from output. The maximum sink current is 10mA.

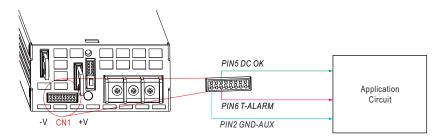



6. Current Sharing with Remote Sense

RSP-1600 has the built-in active current sharing function and can be connected in parallel, up to 6 units, to provide higher output power as exhibited below:


- The power supplies should be paralleled using short and large diameter wiring and then connected to the load.
- X Difference of output voltages among parallel units should be less than 0.2V.
- ** The total output current must not exceed the value determined by the following equation: Maximum output current at parallel operation=(Rated current per unit) * (Number of unit) * 0.9
- ※ When the total output current is less than 5% of the total rated current, or say (5% of Rated current per unit)


 × (Number of unit)

 the current shared among units may not be balanced.
- W Under parallel operation ripple of the output voltage may be higher than the SPEC at light load condition. It will go back to normal ripple level once the output load is more than 5%.
- ※ CN500/SW1 Function pin connection

Parallel	PSU1		PSU2		PS	PSU3		PSU4		PSU5		PSU6	
Faraller	CN500	SW1	CN500	SW1	CN500	SW1	CN500	SW1	CN500	SW1	CN500	SW1	
1 unit	Х	ON	_	_	_	_	_	_	_	_	_	_	
2 unit	V	ON	V	ON	_	_	_	_	_	_	_	_	
3 unit	V	ON	V	OFF	V	ON	_	_	_	_	_	_	
4 unit	V	ON	V	OFF	V	OFF	V	ON	_	_	_	_	
5 unit	V	ON	V	OFF	V	OFF	V	OFF	V	ON	_	_	
6 unit	V	ON	V	OFF	V	OFF	V	OFF	V	OFF	V	ON	

(V: CN500 connected; X: CN500 not connected.)

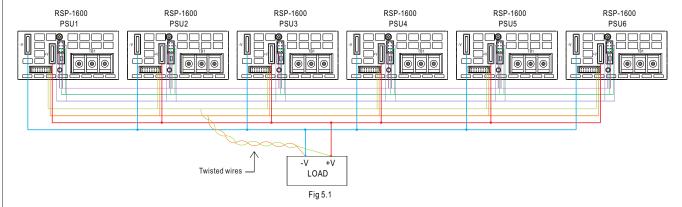


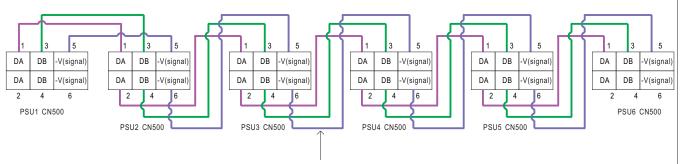

If the lines of CN500 are too long, they should be twisted in pairs to avoid the noise.

- O DA,DB and -V(signal) are connected mutually in parallel.
- $\bigcirc \ \, \text{For Remote Sense / Local Sense, please refer to "Voltage Drop Compensation"} \, \text{section}.$



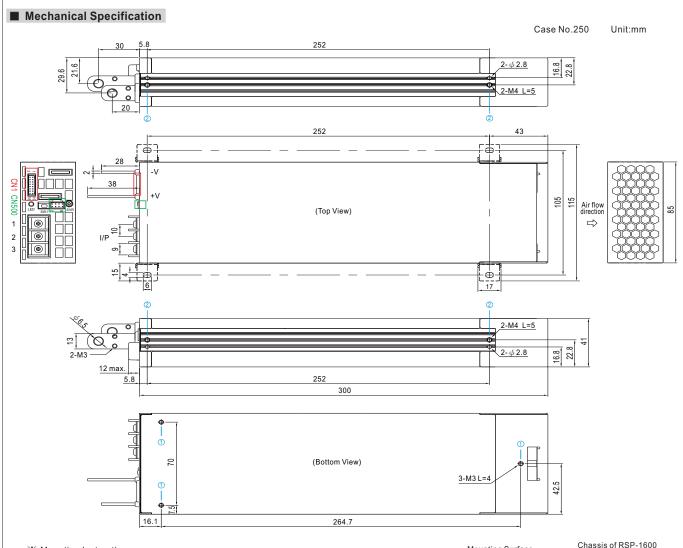

※ Mounting Instruction

,			
Hole No.	Recommended Screw Size	MAX. Penetration Depth L	Recommended mounting torque
1	M3	4mm	6~8Kgf-cm
2	M4	5mm	7~10Kgf-cm

Chassis of RSP-1600 Mounting Surface Mounting Screw

※ Control Pin No. Assignment(CN1): HRS DF11-16DP-2DS or equivalent

1	15
0000	0000
2	16

Mating Housing	HRS DF11-16DS or equivalent
Terminal	HRS DF11-**SC or equivalent

Pin No.	Function	Description			
1	+12V-AUX	Auxiliary voltage output, 10.6~13.2V, referenced to GND-AUX (pin2). The maximum load current is 0.8A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF".			
2	GND-AUX	uxiliary voltage output GND. ne signal return is isolated from the output terminals (+V & -V).			
3	+5V-AUX	Auxiliary voltage output, 4.5~5.5V, referenced to GND-AUX (pin2). The maximum load current is 0.3A. This output has the built-in "Oring diodes" and is not controlled by "Remote ON-OFF			
4	Remote ON-OFF	The unit can turn the output ON/OFF by electrical signal or dry contact between <i>Remote ON/OFF</i> and +5V-AUX. (Note.2) Short (4.5 ~ 5.5V): Power ON; Open (-0.5 ~ 0.5V): Power OFF; The maximum input voltage is 5.5V.			
5	DC-OK	High (3.5 ~ 5.5V): When the Vout \leq 77% \pm 5%. Low (-0.5 ~ 0.5V): When Vout \geq 80% \pm 5%. The maximum sourcing current is 10mA and only for output. (Note.2)			
6	T-ALARM	tigh (3.5 ~ 5.5V): When the internal temperature exceeds the limit of temperature alarm, or when Fan fails. ow (-0.5 ~ 0.5V): When the internal temperature is normal, and when Fan normally works. The maximum sourcing current is 10mA and only for output(Note.2)			
700	NC	For standard model: Retain for future use.			
7,8,9	A0,A1,A2	For PMBus / CANBus model: PMBus / CANBus interface address lines. (Note.1)			
10	NC	Retain for future use.			
11	PC	Connection for constant current level programming. (Note.1)			
12	PV	Connection for output voltage programming. (Note.1)			
13	+V (Signal) Positive output voltage signal. It is for local sense; it cannot be connected directly to the load.				
14	-V (Signal)	Negative output voltage signal. It is for local sense and certain function reference; it cannot be connected directly to the load.			
15	+S	Positive sensing for remote sense.			
16	-S	Negative sensing for remote sense.			

Note.1: Non-isolated signal, referenced to [-V(signal)]. Note.2: Isolated signal, referenced to GND-AUX.



※ LED Status Indicators

LED	Description
Green	The power supply functions normally.
Red	Abnormal status (Over temperature protection, Overload protection, Fan fail.)

$\frak{\%}$ AC Input Terminal Pin No. Assignment

	Pin No.	Assignment	Diagram	Maximum mounting torque
	1	FG ±		
	2	AC/N		8Kgf-cm
ĺ	3	AC/L		

※ Control Pin No. Assignment(CN500): HRS DF11-8DP-2DS or equivalent

1	7
00	00
2	8

Mating Housing	HRS DF11-8DS or equivalent
Terminal	HRS DF11-**SC or equivalent

Pin No.	Function	Description
1,2	DA	Differential digital signal for parallel control.
3,4	DB	Differential digital signal for parallel control.
5,6	-V (Signal)	Negative output voltage signal. It is for certain function reference; it cannot be connected directly to the load.
	NC	For standard model: None.
7	SDA	For PMBus model: Serial Data used in the PMBus interface. (Note)
	CANH	For CANBus model: Data line used in CANBus interface. (Note)
	NC	For standard model: None.
8	SCL	For PMBus model: Serial Clock used in the PMBus interface. (Note)
	CANL	For CANBus model: Data line used in CANBus interface. (Note)

Note: Isolated signal, referenced to GND-AUX.

Control Pin No. Assignment(SW1)

Pin No.	Function	Description
1,2	Terminal resistance	SW1 is the selector of terminal resistor that is designed for DA/DB signals and parallel control function.

■ Installation Manual

Please refer to: http://www.meanwell.com/manual.html